

BEDIENUNGSANLEITUNG

Operator's manual

ZUBEHÖR 3.4.350.550

BEFESTIGUNG DER AUFLAGEGABEL

ACCESSORIES 3.4.350.550

MOUNTING OF THE GRIP SUPORT



Please click here for English version!



Deutsch
English


Befestigung der Auflagegabel mit Spannhülse

Hinweis:

Die Spannhülse darf nicht vor dem Einführen gespannt werden, da dies zu Beschädigungen führen kann.


Funktionsprinzip:

Die Spannhülse dient zur kraftschlüssigen Befestigung der Auflagegabel am Griff. Durch das Anziehen der Spannhülse wird diese radial gegen die Bohrung im Griff gepresst, wodurch eine sichere und spielfreie Verbindung entsteht.

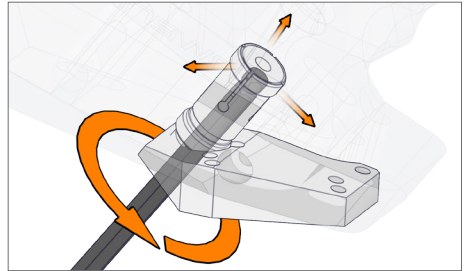


1. Spannhülse vorbereiten

- Führen Sie die Spannhülse der Auflagegabel in die Bohrung auf der Unterseite des Formgriffs ein. Die Spannhülse darf hierzu nicht gespreizt sein.

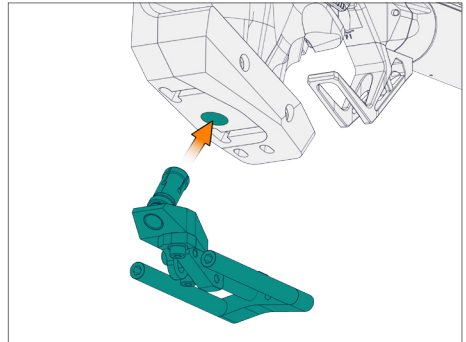

2. Auflagegabel ausrichten


- Schieben Sie die Spannhülse ein, bis die Auflagegabel bündig am Griff anliegt.
- Spannen Sie die Spannhülse nun mit einem Sechskantschlüssel 4 mm um die Auflagegabel im Griff zu fixieren.

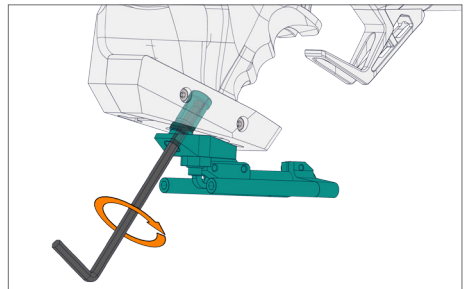

Befestigung der Auflagegabel mit Universalplatte

3. Universalplatte befestigen

- Die Universalanschraubplatte kann mit den mitgelieferten Schrauben (Senkholzschrauben 3x16, Kreuzschlitz) beliebig an einem Griff montiert werden.
Dadurch ist eine freie Platzierung möglich.
Je nach Griff können Sie die passenden Schraubenlöcher auswählen.

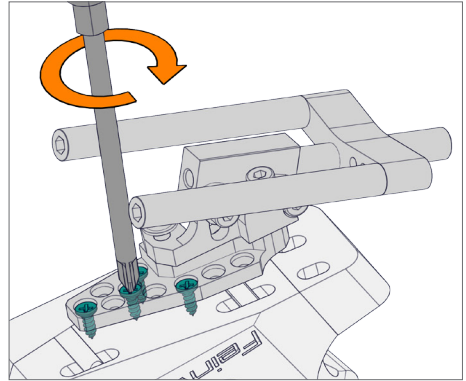


4. Auflage einstellen

- Die Auflagegabel ist nun fest im Griff montiert und kann nach den persönlichen Bedürfnissen ausgerichtet werden.

Hinweis:

Bitte beachten Sie die geltenden Vorschriften der jeweiligen Sportordnung.

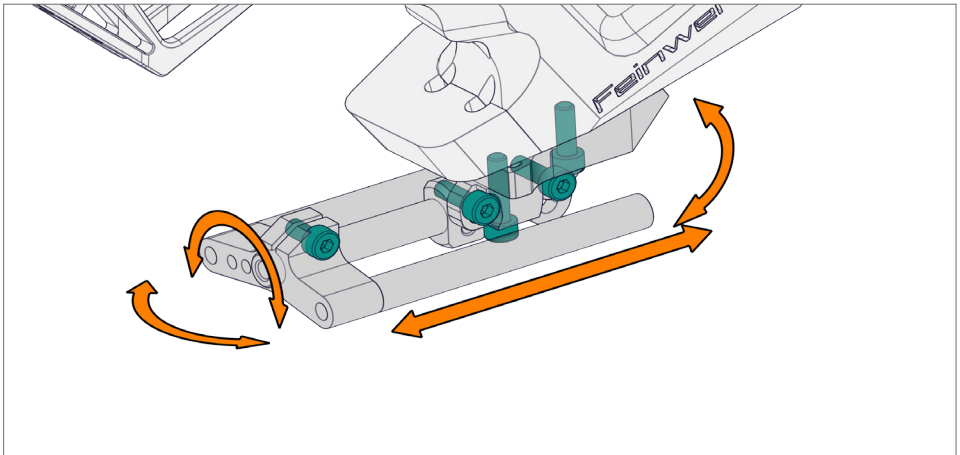


Fastening the grip support with a clamping sleeve

Note:

Do not clamp the clamping sleeve without inserting it into the hole provided in the grip. Doing so may cause the clamping sleeve to break.


How it works:

The clamping sleeve is used to securely attach the Grip support fork to the grip. Tightening the clamping sleeve presses it radially against the hole in the grip, creating a secure and play-free connection.

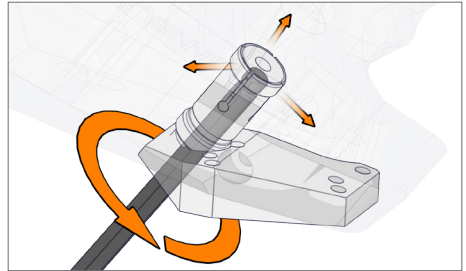


1. Prepare the clamping sleeve

- Insert the clamping sleeve of the grip support into the hole on the underside of the mold grip. The clamping sleeve must not be spread apart for this purpose.

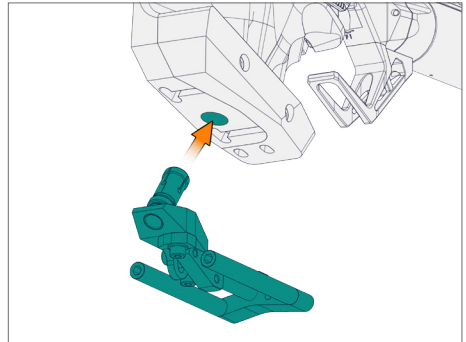

2. Align grip support


- Push in the clamping sleeve until the support fork is flush with the grip.
- Now tighten the clamping sleeve with 4 mm hex key to secure it around the support fork in the grip.

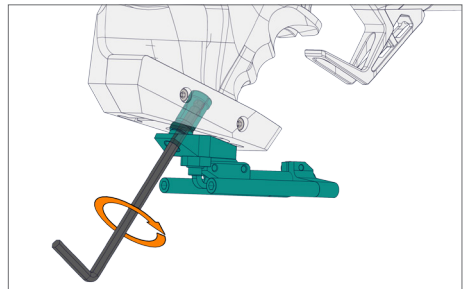

Fastening the grip suport with Universal Plate

3. Attach the Universal Plate

- The universal mounting plate can be attached to any grip using the supplied screws (countersunk wood screws 3x16, cross-slot). This allows free positioning and depending on the grip, you can choose the appropriate screw holes. The screws should be inserted by hand to avoid damaging the material.

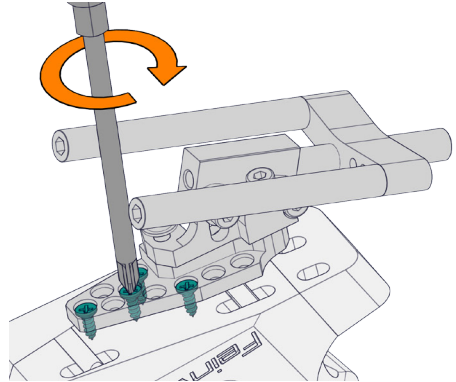


4. Adjust the grip support

- The grip support is now securely mounted in the grip and can be adjusted according to personal requirements.

Note:


Please observe the applicable regulations of the respective sports rules.

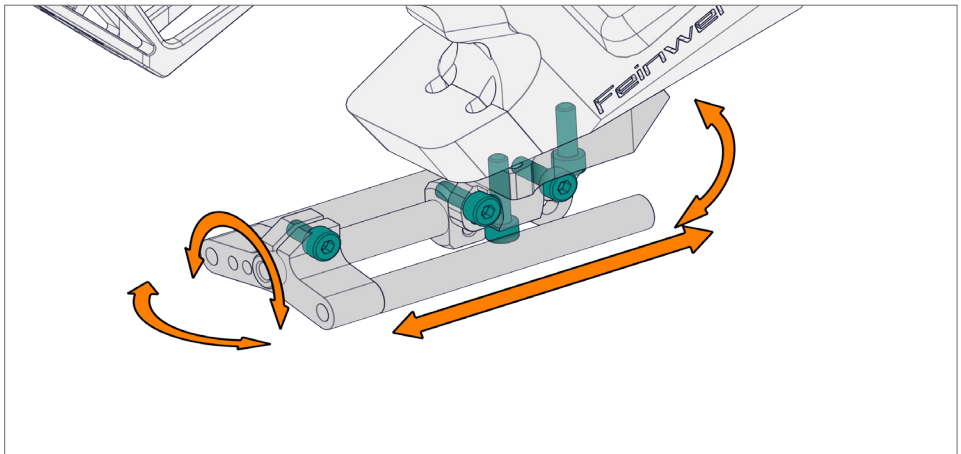

Notizen / Notes



Notizen / Notes

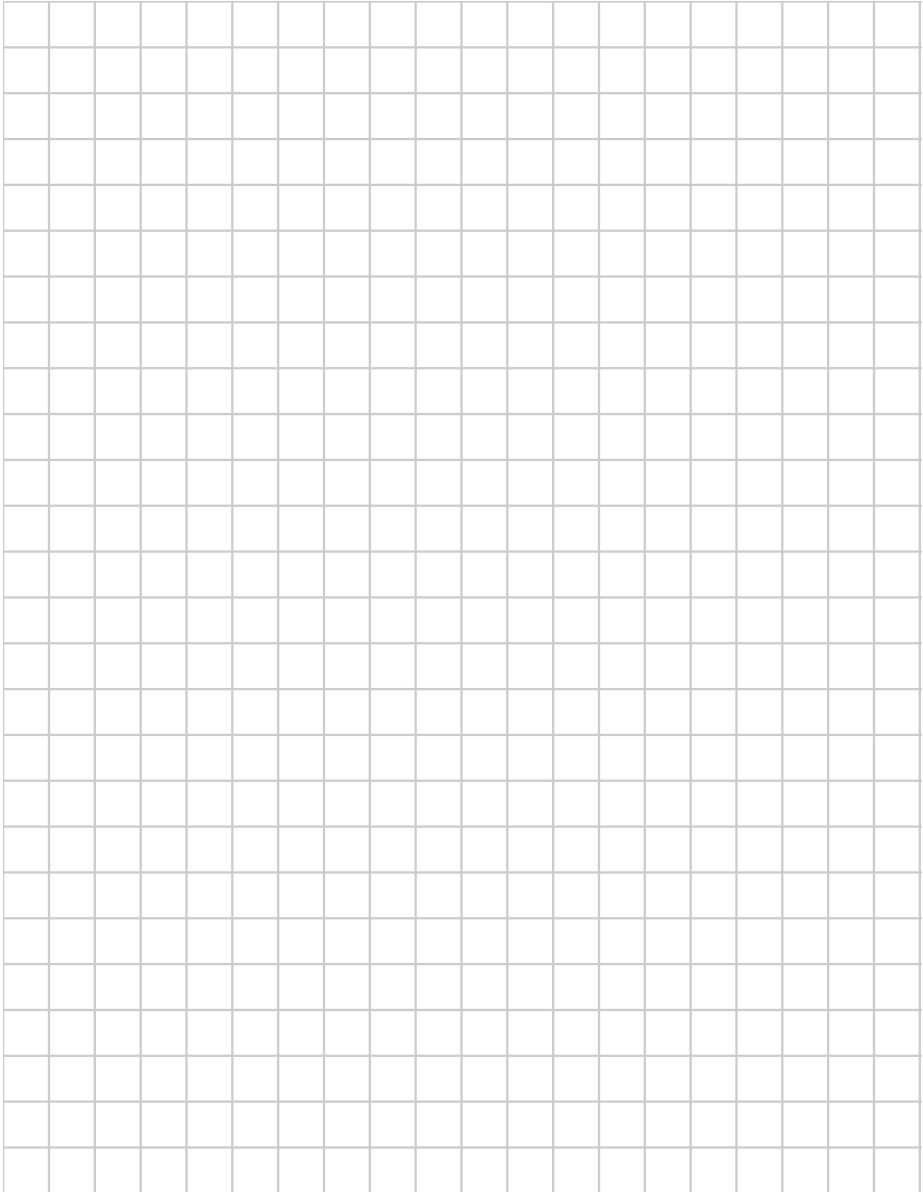

Qualität
„Made in Germany“



.Präzision
.Design
.Tradition
.Zusammenspiel
.Erfolg

V01 - November 2025 | 48002

