

BEDIENUNGSANLEITUNG

Operator's manual

ZUBEHÖR 3.2.430.575

ERHÖHUNG FÜR HANDAUFLAGE

ERMÖGLICHT EINEN VERSTELLBEREICH VON 89 MM BIS ZU 140 MM
ZWISCHEN LAUFACHSE UND UNTERKANTE DER HANDAUFLAGE


ACCESSORIES 3.2.430.575

ELEVATION FOR HAND REST

ALLOWS FOR AN ADJUSTMENT RANGE OF 89 MM TO 140 MM BETWEEN THE
BARREL AXIS AND THE LOWER EDGE OF THE HAND REST.



[Please click here for English version!](#)

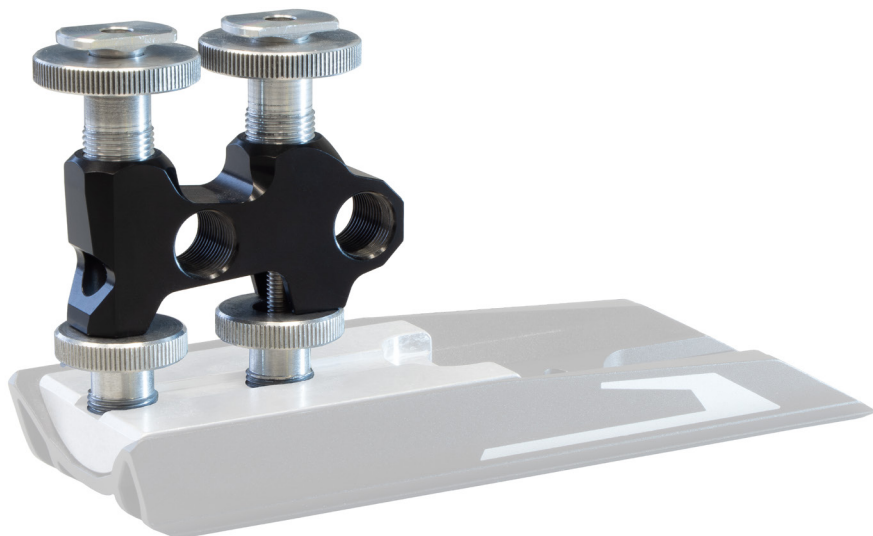

Handauflage

Funktionsprinzip


Die Handauflage kann in der im Vorderschaft angebrachten, durchgängigen T-Nut in jeder Längsposition stufenlos festgestellt werden. Mittels der verbauten Stellschrauben kann die Handauflage in der Höhe eingestellt werden. Die Handauflage kann außerdem nach vorne oder hinten geneigt werden. **Die Erhöhung der Handauflage** ermöglicht vier verschiedene Varianten, die jeweils unterschiedliche Höhenoptionen bieten. Diese lassen sich mithilfe der Distanzbuchsen individuell einstellen. Durch das Ein- oder Herausdrehen der Distanzbuchsen kann die Höhe der Handauflage flexibel angepasst werden – entweder erhöht oder verringert.

Die möglichen Varianten der Zusammenstellung werden auf den folgenden Seiten dargestellt.

Standard 79,5 - 89,5 mm



Zubehör **Variante 1** = 89 - 96,5 mm **Variante 2** = 96,5 - 105 mm
Variante 3 = 105 - 124 mm **Variante 4** = 120 - 140 mm

Die angegebenen Höhenmaße sind Näherungswerte und können geringfügig variieren. Beim Modell 800 dient die unterste Kante des Vorderschafts als Referenzpunkt für die Messung.

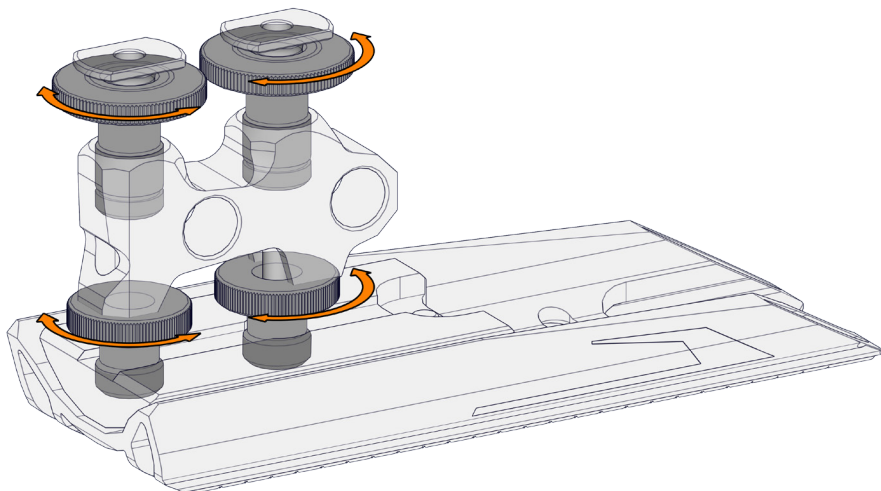


Einstellung der Handauflage

1. Die beiden Senkkopfschrauben lösen und etwas herausdrehen, sodass sich die Handauflage löst (M5).
2. Über die Distanzbuchsen die benötigte Höhe einstellen, gegebenenfalls die beiden Senkkopfschrauben etwas weiter herausdrehen.
3. Nach dem Einstellen der gewünschten Höhe die beiden Senkkopfschrauben wieder festziehen (4 Nm).

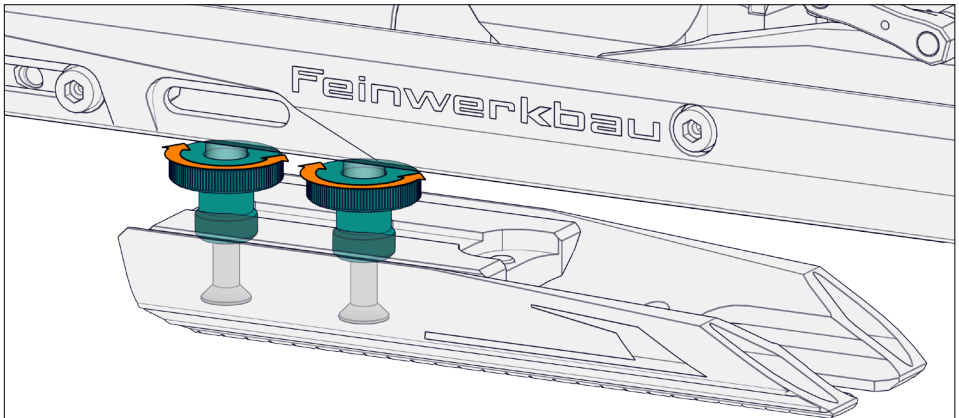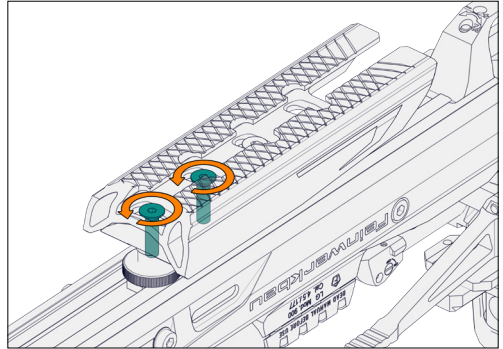

Komponentenübersicht

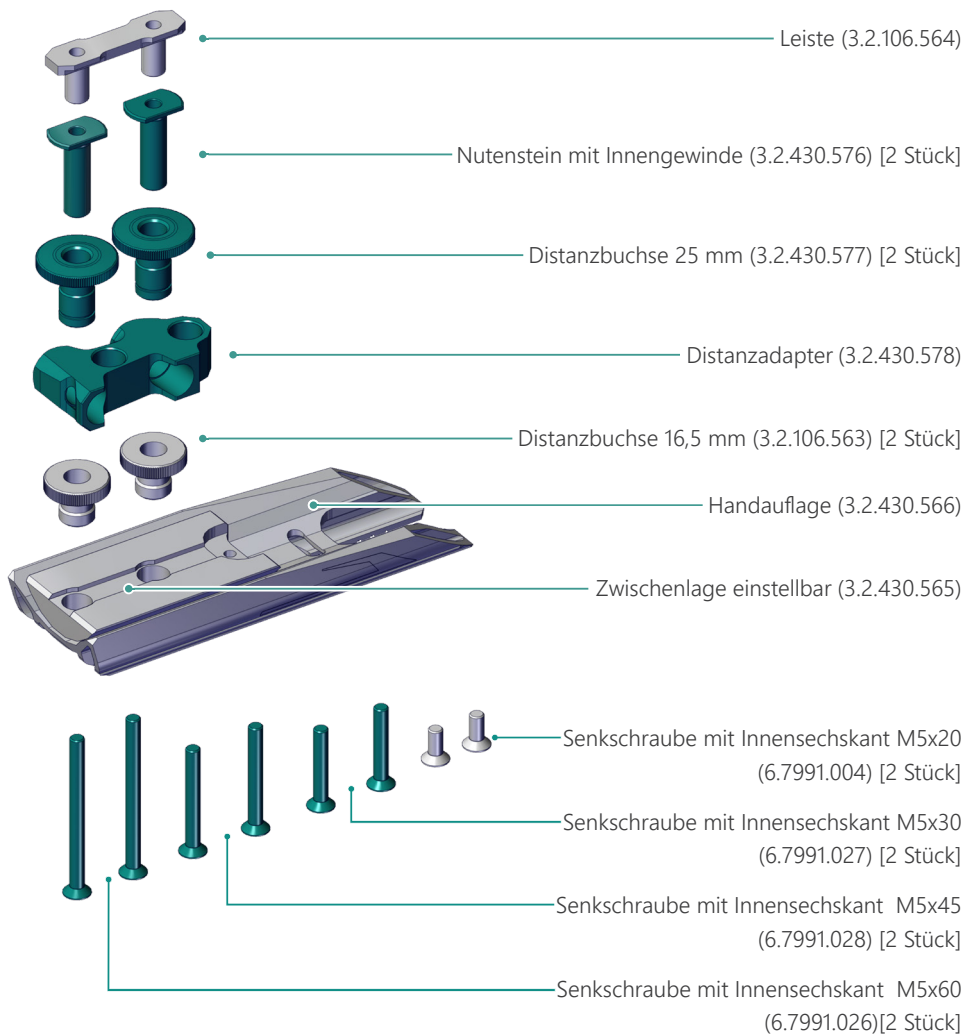



Im Serienlieferungsumfang enthalten



Im Lieferumfang des Zubehörs enthalten

Standard Variante

Mit der **Standard Variante** der Handauflage kann ein Abstand zwischen Handauflage und Laufachse von **79,5 mm bis 89,5 mm** eingestellt werden. Diese Einstellung erfolgt über die beiden **Distanzbuchsen**, die im Serienumfang enthalten sind und erfordert keine zusätzlichen Komponenten.

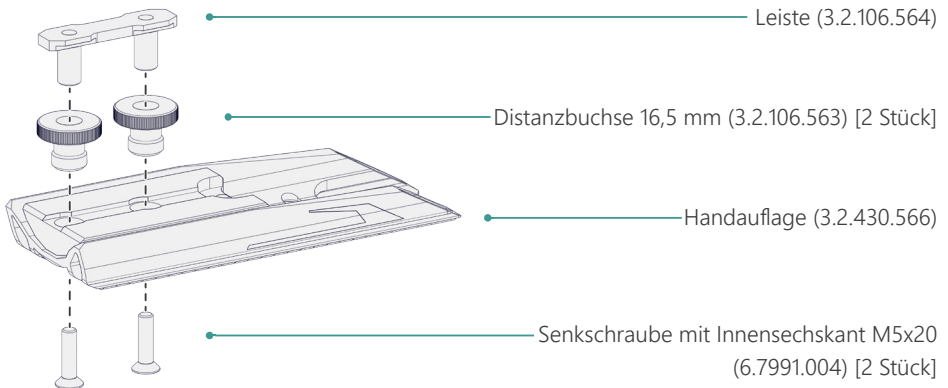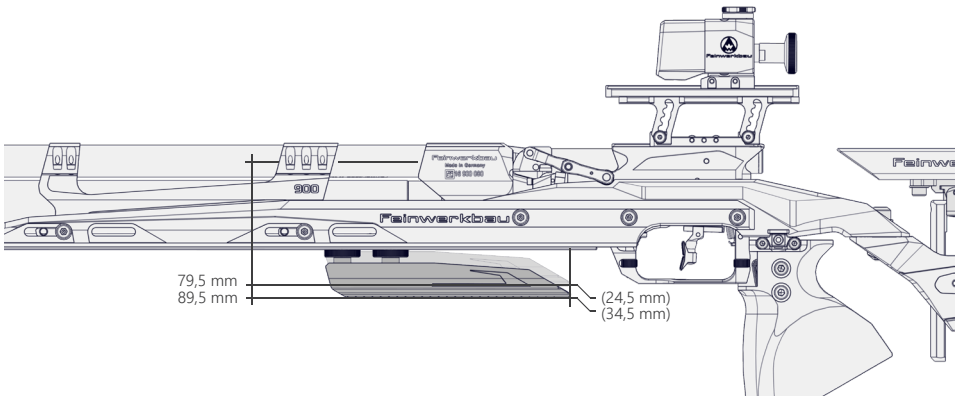

Im Serienlieferungsumfang enthalten





Im Lieferumfang des Zubehörs enthalten



Variante 1

Mit der **Variante 1** der Handauflage kann ein Abstand zwischen Handauflage und Laufachse von **89 mm bis 96,5 mm** eingestellt werden. Diese Einstellung erfolgt über die **Distanzbuchsen** (siehe Seite 3). Die **Variante 1** besteht aus Teilen, die der Waffe beiliegen, und Komponenten, die **im Zubehör enthalten sind**.

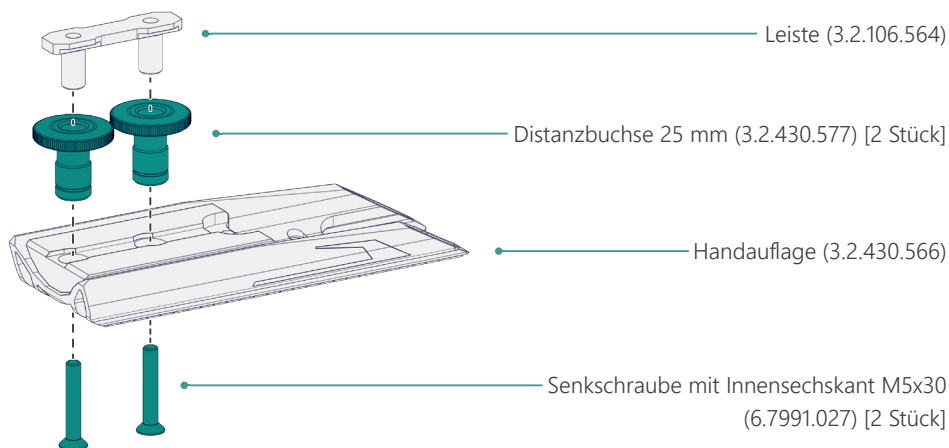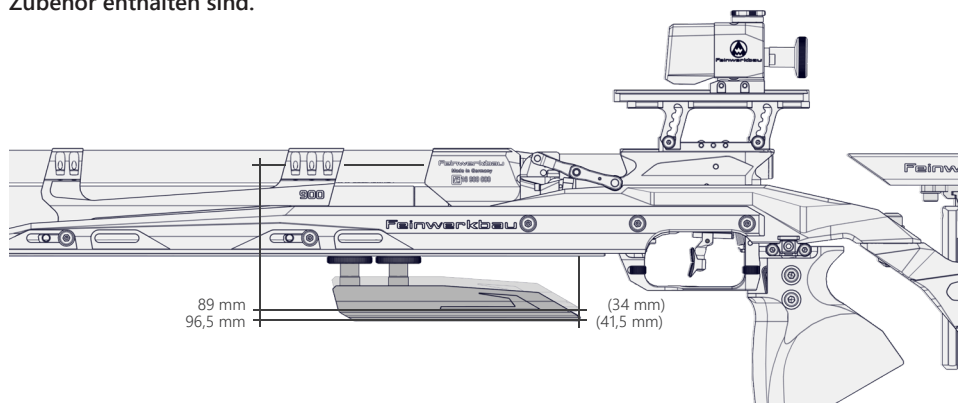



Im Serienlieferungsumfang enthalten



Im Lieferumfang des Zubehörs enthalten

Variante 2

Mit der **Variante 2** der Handauflage kann ein Abstand zwischen Handauflage und Laufachse von **96,5 mm bis 105 mm** eingestellt werden. Diese Einstellung erfolgt über die **Distanzbuchsen** (siehe Seite 3). Die **Variante 2** besteht aus Teilen, die der Waffe beiliegen, und Komponenten, die **im Zubehör enthalten sind**.

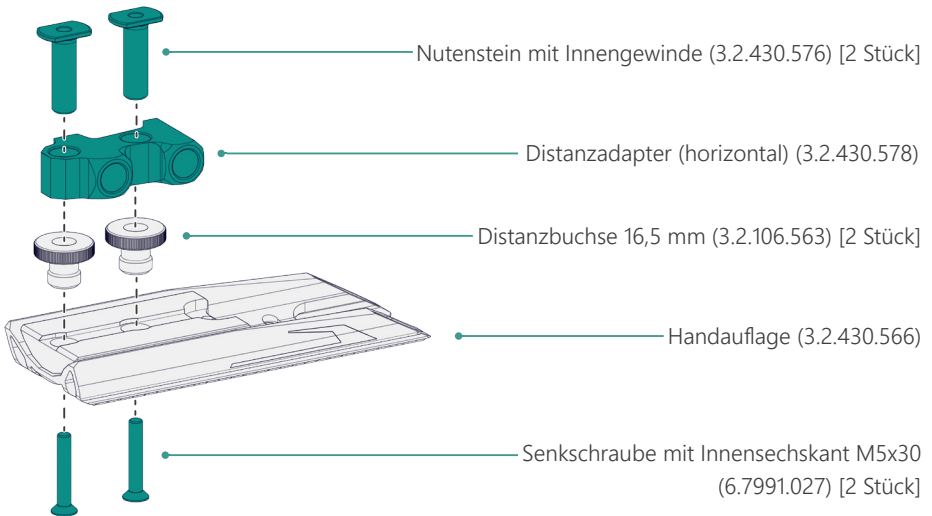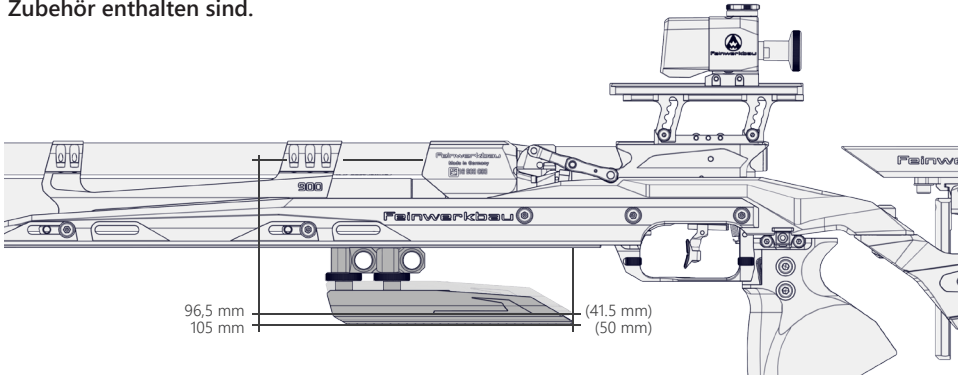

Im Serienlieferungsumfang enthalten





Im Lieferungsumfang des Zubehörs enthalten



Variante 3

Mit der **Variante 3** der Handauflage kann ein Abstand zwischen Handauflage und Laufachse von **105 mm bis 124 mm** eingestellt werden. Diese Einstellung erfolgt über die **Distanzbuchsen** (siehe Seite 3). Die **Variante 3** besteht aus Teilen, die der Waffe beiliegen, und Komponenten, die **im Zubehör enthalten sind**.

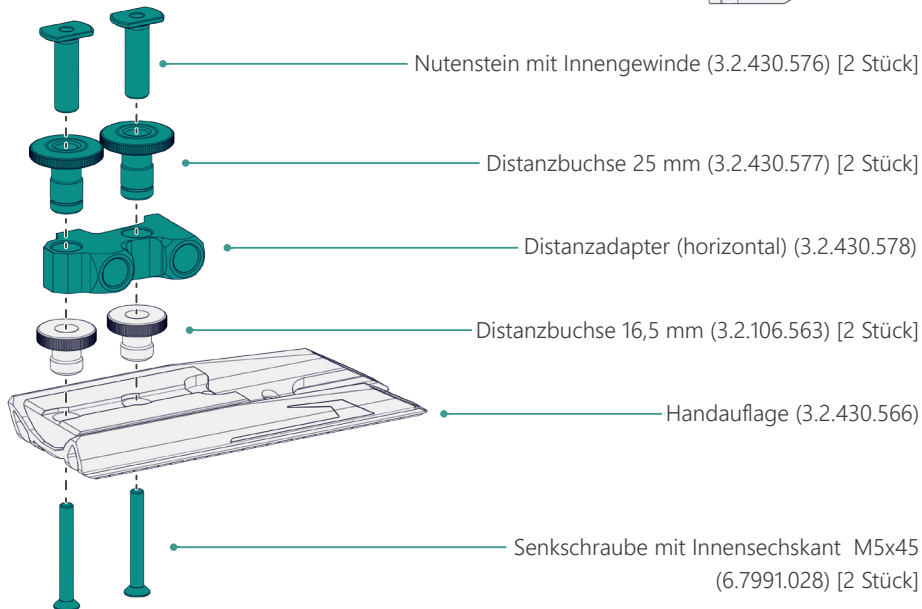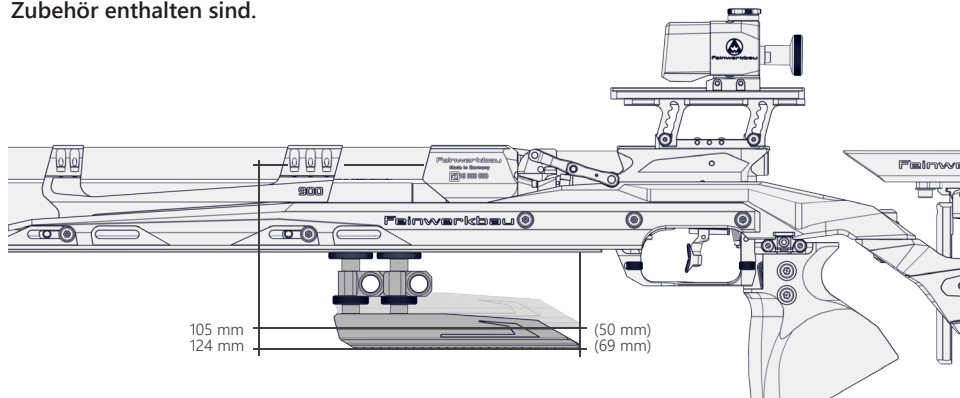



Im Serienlieferungsumfang enthalten



Im Lieferumfang des Zubehörs enthalten

Variante 4

Mit der **Variante 4** der Handauflage kann ein Abstand zwischen Handauflage und Laufachse von **120 mm bis 140 mm** eingestellt werden. Diese Einstellung erfolgt über die **Distanzbuchsen** (siehe Seite 3). Die **Variante 4** besteht aus Teilen, die der Waffe beiliegen, und Komponenten, die **im Zubehör enthalten sind**.

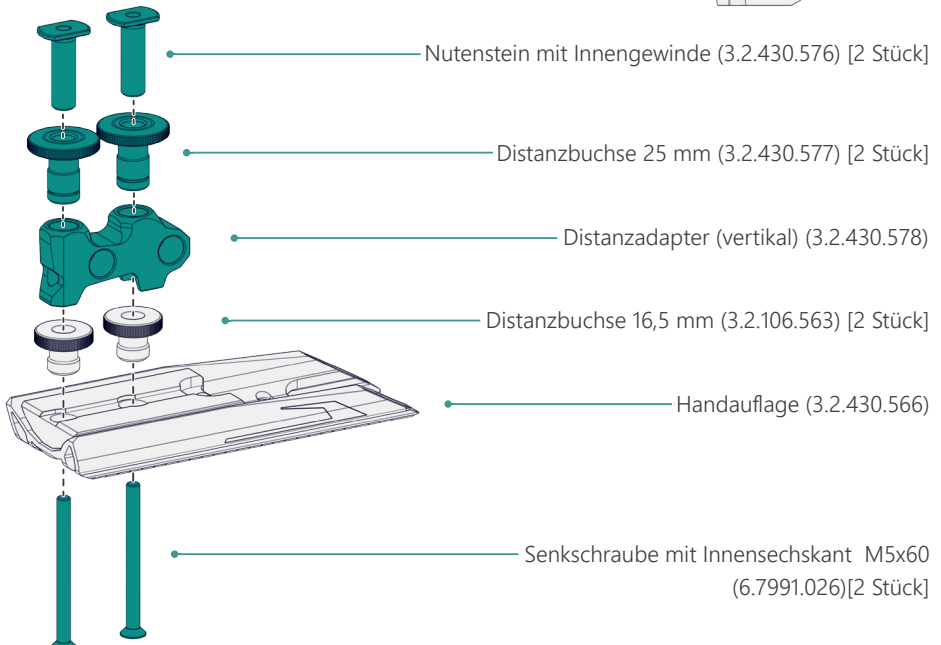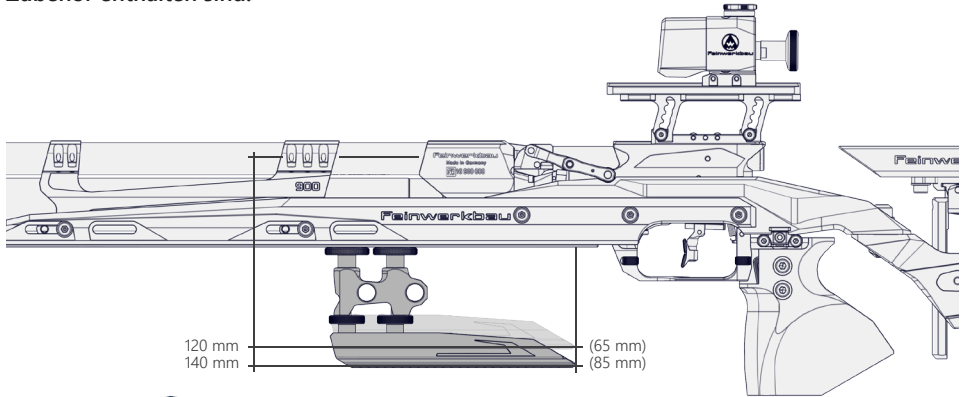

Im Serienlieferumfang enthalten



Im Lieferumfang des Zubehörs enthalten

Hand rest

Operating principle

The hand rest can be fixed in any longitudinal position in the continuous T-slot in the front stock. The height of the hand rest can be adjusted using the built-in adjusting screws. The hand rest can also be tilted forward or backward. **The elevation of the hand rest** allows for four different options, each offering different height options. These can be individually adjusted using the spacer bushings. By screwing the spacer bushings in or out, the height of the hand rest can be flexibly adjusted-either raised or lowered.


The possible options of the combination are shown on the following pages.

Standard 79.5 - 89.5 mm

Accessories **Option 1** = 89 - 96.5 mm **Option 2** = 96.5 - 105 mm
Option 3 = 105 - 124 mm **Option 4** = 120 - 140 mm



The specified height measurements are approximate values and may vary slightly.

On model 800, the lowest edge of the front stock serves as the reference point for measurement.

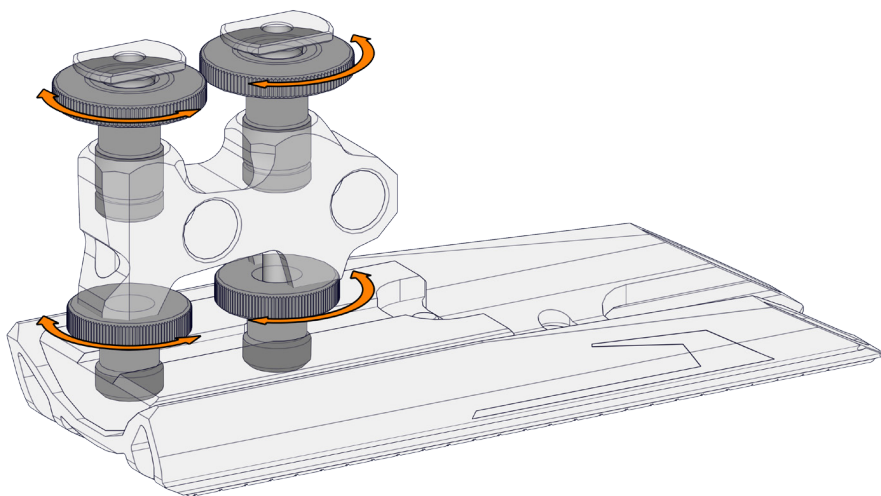


Adjusting the hand rest

1. Loosen the two countersunk screws and unscrew them slightly so that the hand rest comes loose (M5).
2. Adjust the required height using the spacer bushings; if necessary, unscrew the two countersunk screws a little further.
3. After adjusting to the desired height, retighten the two countersunk screws (4 Nm).

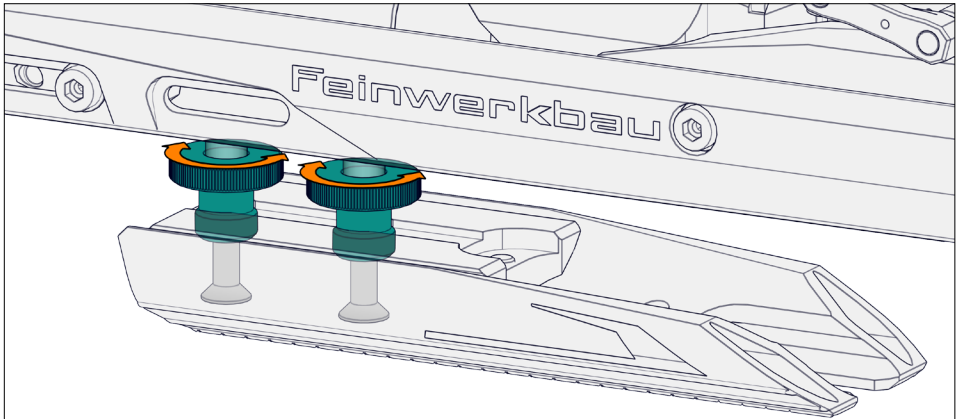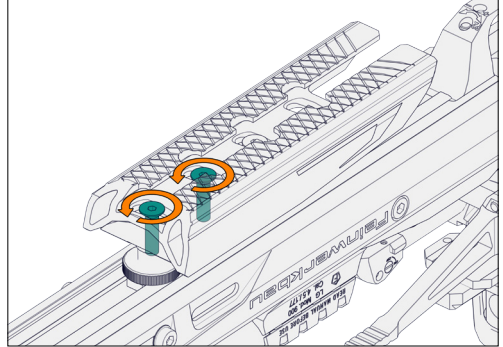

Component overview

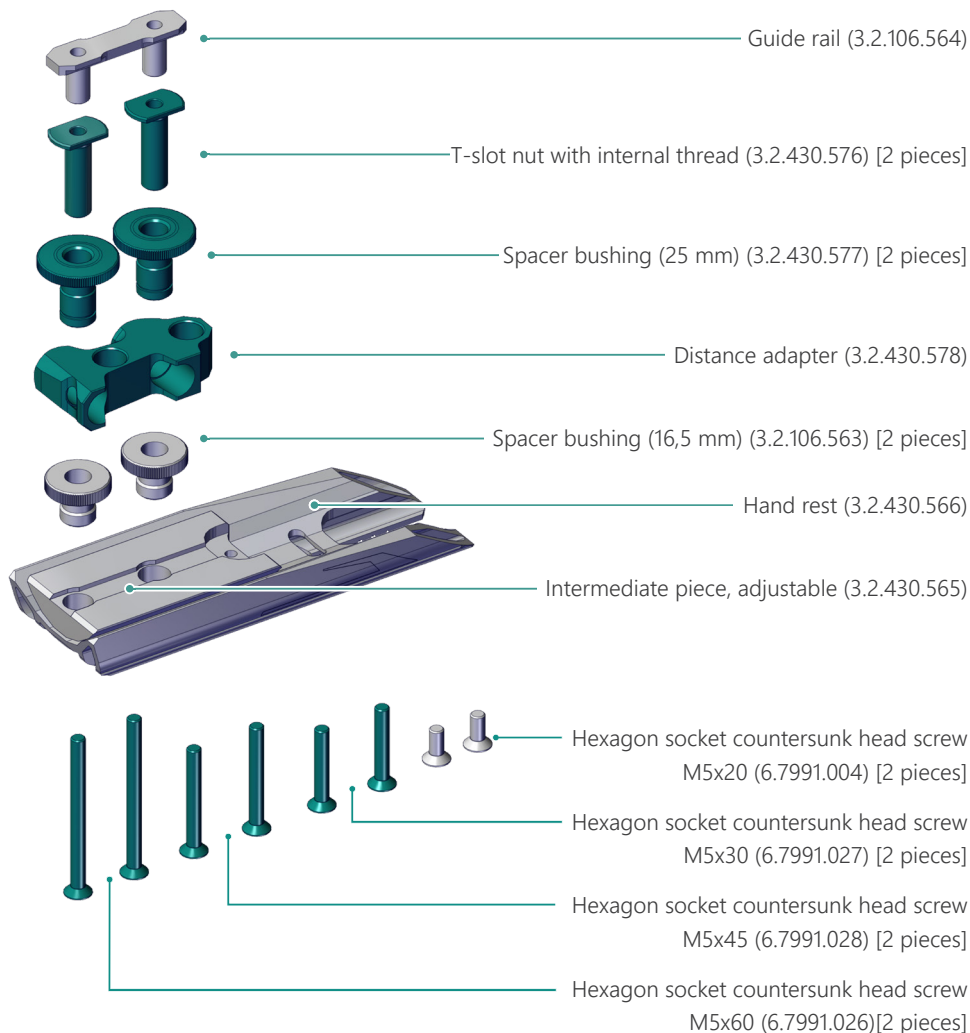



Included in the standard scope of delivery



Included in the scope of delivery of the accessories

Standard option

With the **standard option** of the hand rest, the distance between the hand rest and the barrel axis can be adjusted from **79.5 mm to 89.5 mm**. This adjustment is made using the two spacer bushings **included in the standard scope of delivery** and does not require any additional components.

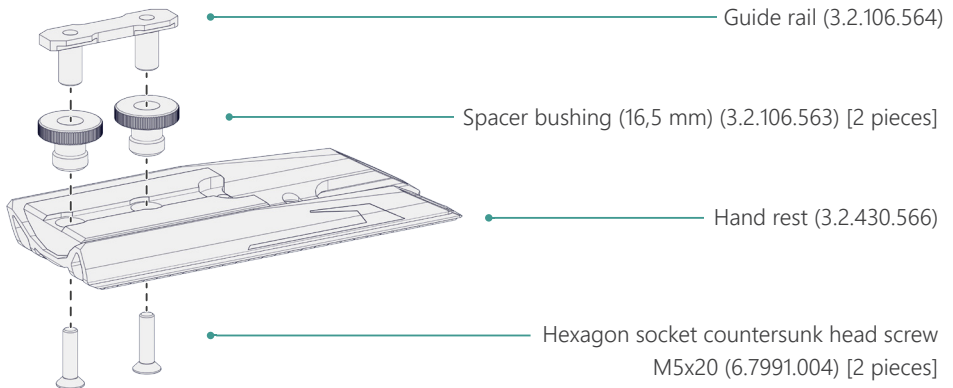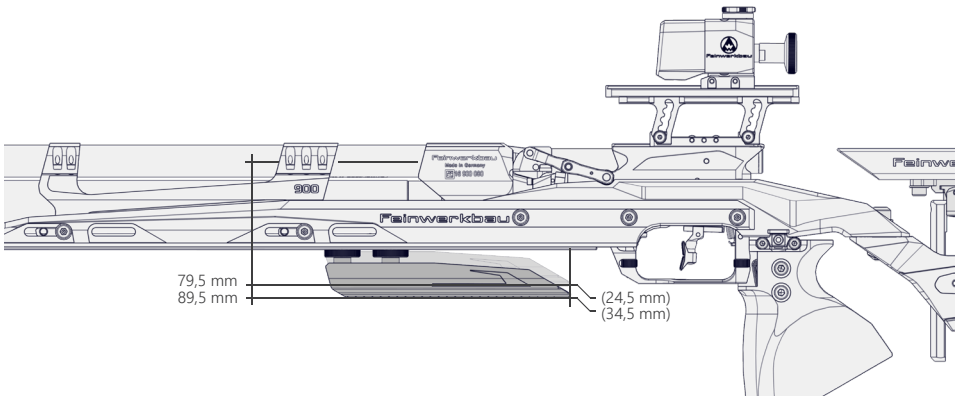

Included in the standard scope of delivery





Included in the scope of delivery of the accessories



Option 1



With **option 1** of the hand rest, the distance between the hand rest and the barrel axis can be adjusted from **89 mm to 96.5 mm**. This adjustment is made using the spacer bushings (see page 3). **Option 1** consists of parts that are **included with the rifle and components that are included in the accessories**.

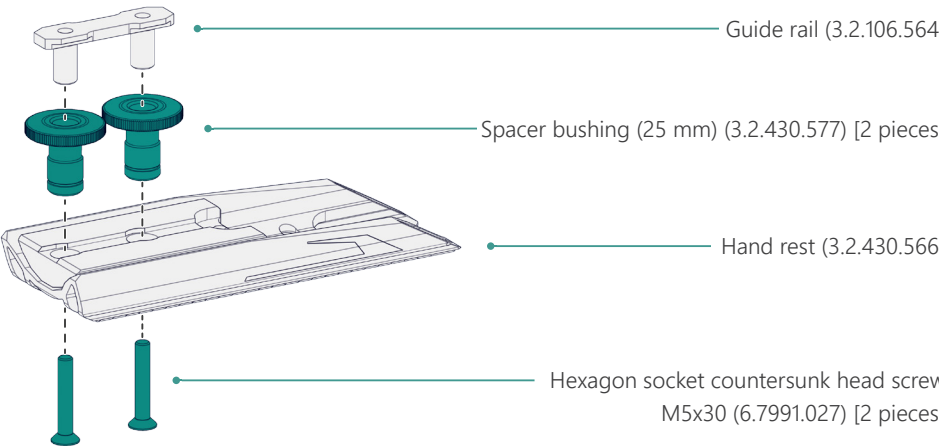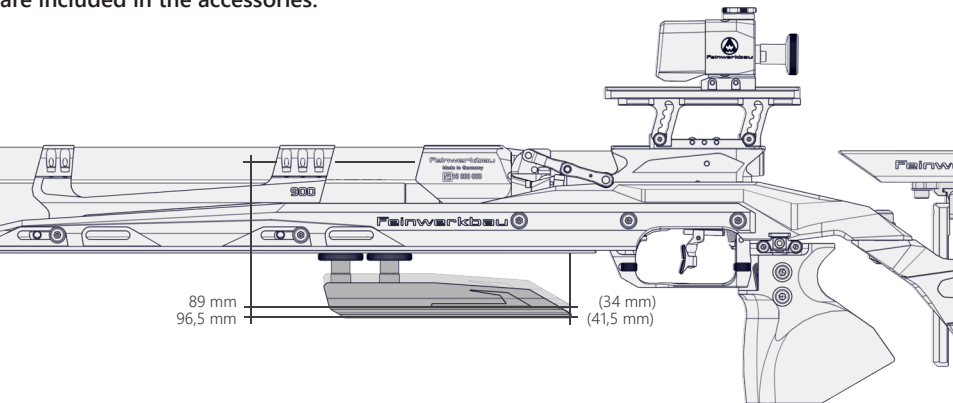

-  Included in the standard scope of delivery
-  Included in the scope of delivery of the accessories

Option 2

With **option 2** of the hand rest, the distance between the hand rest and the barrel axis can be adjusted from **96.5 mm to 105 mm**. This adjustment is made using the spacer bushings (see page 3). **Option 2** consists of parts that are **included with the rifle and components that are included in the accessories**.

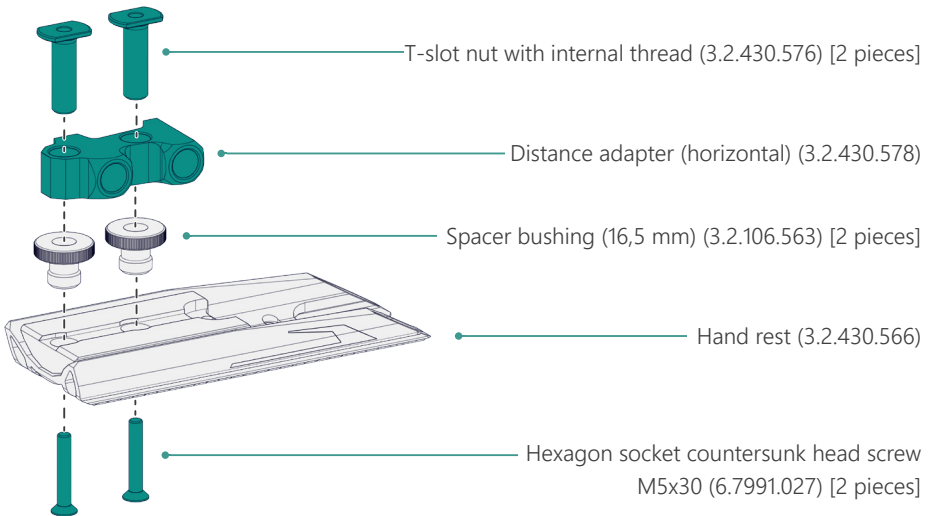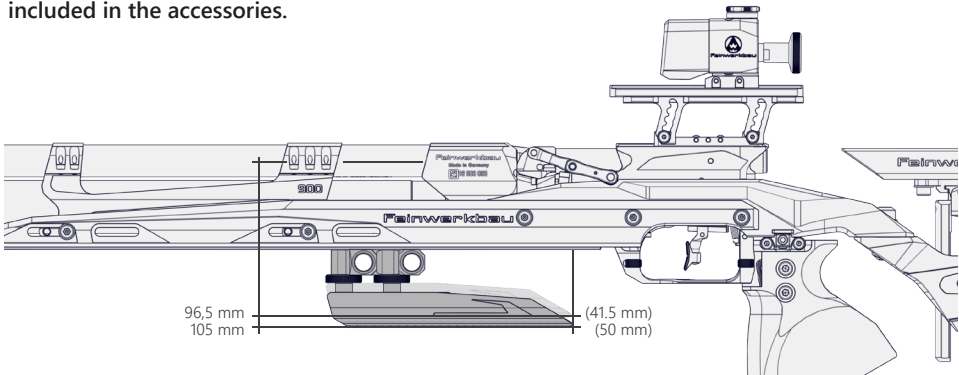

Included in the standard scope of delivery




Included in the scope of delivery of the accessories



Option 3

With **option 3** of the hand rest, the distance between the hand rest and the barrel axis can be adjusted from **105 mm to 124 mm**. This adjustment is made using the spacer bushings (see page 3). **Option 3** consists of parts that are **included with the rifle and components that are included in the accessories**.

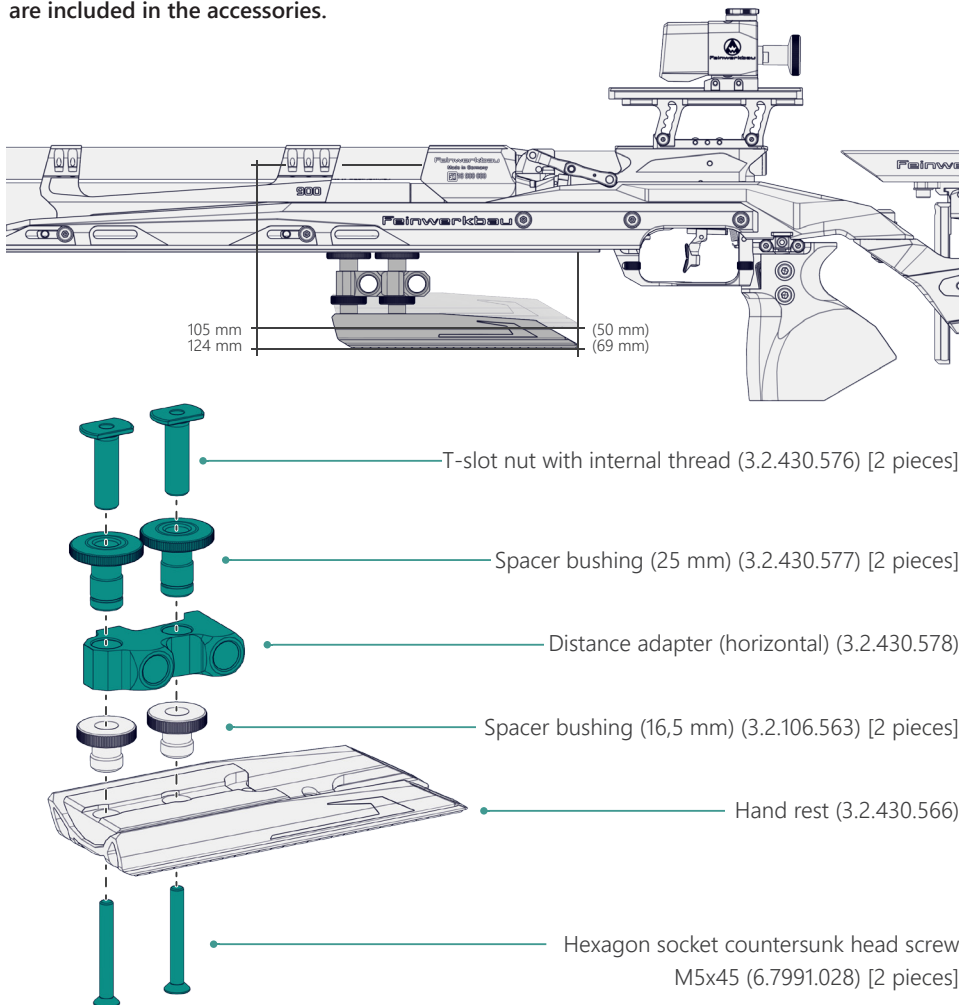



Included in the standard scope of delivery



Included in the scope of delivery of the accessories

Option 4

With **option 4** of the hand rest, the distance between the hand rest and the barrel axis can be adjusted from **120 mm to 140 mm**. This adjustment is made using the spacer bushings (see page 3). **Option 4** consists of parts that are **included with the rifle and components that are included in the accessories**.

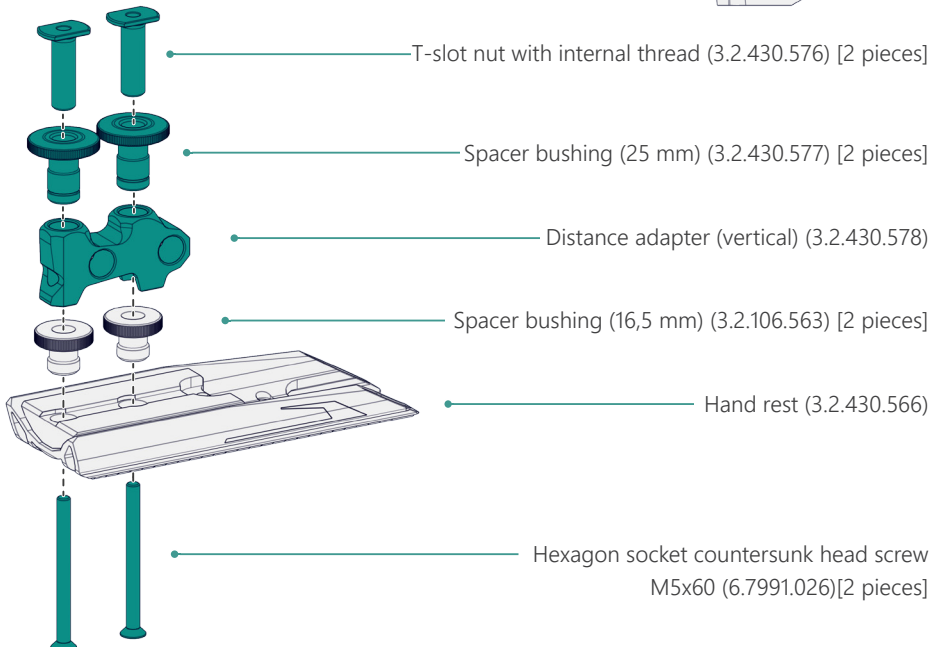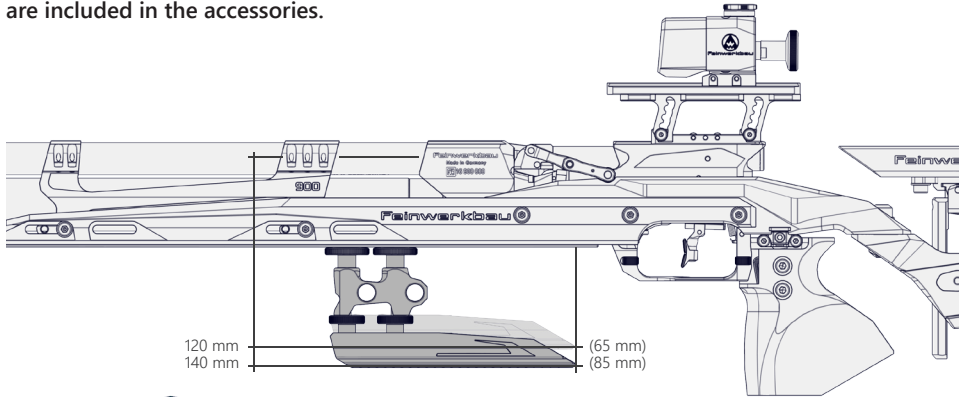

-  Included in the standard scope of delivery
-  Included in the scope of delivery of the accessories

Notizen / Notes



Notizen / Notes



Qualität
„Made in Germany“



.Präzision
.Design
.Tradition
.Zusammenspiel
.Erfolg

V01 - November 2025 | Art.-Nr. 48001

